

MEGA VIEW 561

User's Guide

G52-U5561X1

Table of Contents

| | |
|--|-----------|
| Safety Instructions | 4 |
| Chapter 1. Introduction | 5 |
| How to Use This Guide | 6 |
| Unpack | 7 |
| Chapter 2. Get Started | 10 |
| Overview | 10 |
| Operating Menu Displays | 12 |
| Main Menu | 12 |
| Video/Photo/Music Menu | 12 |
| FM Radio | 13 |
| Voice Recording | 13 |
| AV Recording | 13 |
| Setting Menu | 14 |
| Tripod | 14 |
| USB Hard Disk | 14 |
| Hard Disk Capacity | 15 |
| Hard Disk Space Rest Reference | 15 |
| Lock Switch | 15 |
| Remote Control | 15 |
| Li-ion Battery Recharging | 16 |
| Battery Consuming Reference | 16 |
| Chapter 3. Connect & Remove from PC | 17 |
| Connect MEGA VIEW 561 to Computer | 17 |
| For systems with Windows 98SE | 18 |
| *Format MEGA VIEW 561 | 18 |
| Safely Remove MEGA VIEW 561 from Computer | 19 |
| Chapter 4. Basic Usage | 20 |
| Power On and Off | 20 |

| | |
|--|-----------|
| Volume Adjustment | 20 |
| Video | 21 |
| Music..... | 23 |
| Photo | 25 |
| FM Radio | 27 |
| Search a FM Station..... | 27 |
| Store a FM station..... | 28 |
| Select a stored FM station..... | 28 |
| Record voice from a FM station | 28 |
| Voice Recording..... | 29 |
| Record Voice..... | 29 |
| Play a Recorded Voice File..... | 29 |
| Delete a Recorded Voice File..... | 29 |
| AV Recording..... | 30 |
| Record AV..... | 30 |
| Play a Recorded AV File..... | 31 |
| Delete a Recorded AV File..... | 31 |
| Setting | 32 |
| Display Tab..... | 32 |
| Photo Tab | 33 |
| Record Tab..... | 34 |
| System Tab | 35 |
| Info Tab..... | 36 |
| Appendix A. Specifications | 37 |
| Appendix B. Drivers and Recovery CD | 38 |
| Upgrade Software..... | 39 |
| Upgrade Firmware | 40 |

Safety Instructions

1. Always read the safety instructions carefully.
2. Keep this User's Guide for future reference.
3. Keep **MEGA VIEW 561** away from humidity.
4. Keep **MEGA VIEW 561** away from long exposure to the sun light.
5. Never pour any liquid into **MEGA VIEW 561** to avoid damages or electrical shock.
6. If any of the following situations occurs, get **MEGA VIEW 561** checked by a service personnel:
 - Liquid has penetrated into **MEGA VIEW 561**.
 - **MEGA VIEW 561** has been exposed to moisture.
 - **MEGA VIEW 561** has not worked well or you can not get functions to work correctly according to User's Guide.
 - **MEGA VIEW 561** has dropped and damaged.
7. **DO NOT** use **MEGA VIEW 561** in the following situations:
 - While driving or riding a vehicle.
 - While operating something dangerous.
 - While walking on street.
 - Be in any situations or environments require concentration.
8. If you need to format **MEGA VIEW 561** hard disk, please select **FAT32** format. **DO NOT PARTITION MEGA VIEW 561 HARD DISK.**
9. **DO NOT** use any liquids or aerosol sprays to clean this device. Use a clean dampened cloth instead.
10. Adjust to proper volume while listening with earphone to avoid permanent harm to hearing capability.
11. Use a wrong battery may cause explosion! Follow the instruction on the battery section to use battery properly.
12. The used battery is not garbage and should be recycled.

Chapter 1. Introduction

Thank you for purchasing **MEGA VIEW 561**. We are proud to tell you that **MEGA VIEW 561** is thoroughly tested and certified product. The new **MEGA VIEW 561** will improve the convenience of storing your personal data and enjoyment of using various video/ audio functions.

MEGA VIEW 561 is a high performance portable digital video/ audio player and recorder which comes with a Li-ion rechargeable and removable battery. On **MEGA VIEW 561**, you can play video and audio files in various formats, listen to **FM** radio broadcast, and record video/audio. **MEGA VIEW 561** is also a portable USB storage to which you are able to manage and store personal data.

Following are the main features of **MEGA VIEW 561**:

- **Video Player** – supports MPEG-4, DivX 3.11/4.x/5.x, Motion JPEG, and WMV-9 SP@ML format video playback.
- **Audio Player** – supports MP3, MPEG 1 Layer 2, LPCM, ADPCM, and WMA-9 Layer 2a format audio files playback.
- **Photo Viewer** – supports JPEG, GIF, BMP, and TIFF photos. You can download photos to **MEGA VIEW 561** and browse them with this function.
- **FM Radio** – supports **FM** Radio function. You are able to store up to 8 favorite **FM** stations. You can also record the FM radio into audio files.
- **Recording** – supports recording function for video and audio. You can use this function to record voice, music, FM radio, and video.
- **USB Storage** – supports USB 2.0 storage. You can use the built-in 20GB hard disk for data storage.

We sincerely thank you for choosing **MEGA VIEW 561**. We hope that you will continue to turn to us for quality products as your needs and interests grow.

How to Use This Guide

This User's Guide provides instructions and illustrations on how to install and operate your **MEGA VIEW 561**. With step-by-step instructions, we will guide you through **MEGA VIEW 561** driver installation process. If you are not familiar with computer operating system, we suggest you to learn more information about Microsoft Windows from your Microsoft Windows manual and help documents before installing **MEGA VIEW 561** driver.

Chapter 1, **Introduction**, shows you all **MEGA VIEW 561** accessories in the package. Please check out if you have all of them included when you open the packing box. If any item is damaged or missing, please contact your vendor directly.

Chapter 2, **Get Started**, introduces the function keys of **MEGA VIEW 561**, the LCD Display status in different modes, and how to recharge the built-in Li-ion battery.

Chapter 3, **Connect and Remove from Computer**, describes how to connect and remove **MEGA VIEW 561** from your computer.

Chapter 4, **Basic Usage**, describes how to operate all the functions of **MEGA VIEW 561**. We suggest you to read this chapter carefully before using **MEGA VIEW 561**.

Appendix A, **Specifications**, provides **MEGA VIEW 561** specifications.



Appendix B, **Driver and Recovery CD**, describes how to use the bundled Driver and Recovery CD.

Unpack¹

| | |
|---|-------------------------|
|  | MEGA VIEW 561 |
|  | Strap |
|  | Stereo Earphones |
|  | AC Adapter ² |

1 The accessories of MEGA VIEW 561 package may be different from those shown above.

2 MEGA VIEW 561 battery should be charged ONLY with the provided Adapter!

| | |
|--|-------------------------|
|  A black cable with a 3.5mm audio jack on one end and four RCA connectors (white, red, yellow, and black) on the other end. | <p>AV-in/ out Cable</p> |
|  A black cable with a USB Type-A connector on one end and a USB Type-B connector on the other end. | <p>USB Cable</p> |
|  A black, three-legged tripod with a mounting bracket at the top. | <p>Tripod</p> |



Remote Control




Handy Bag



Driver and Recovery CD

Chapter 2. Get Started

Overview

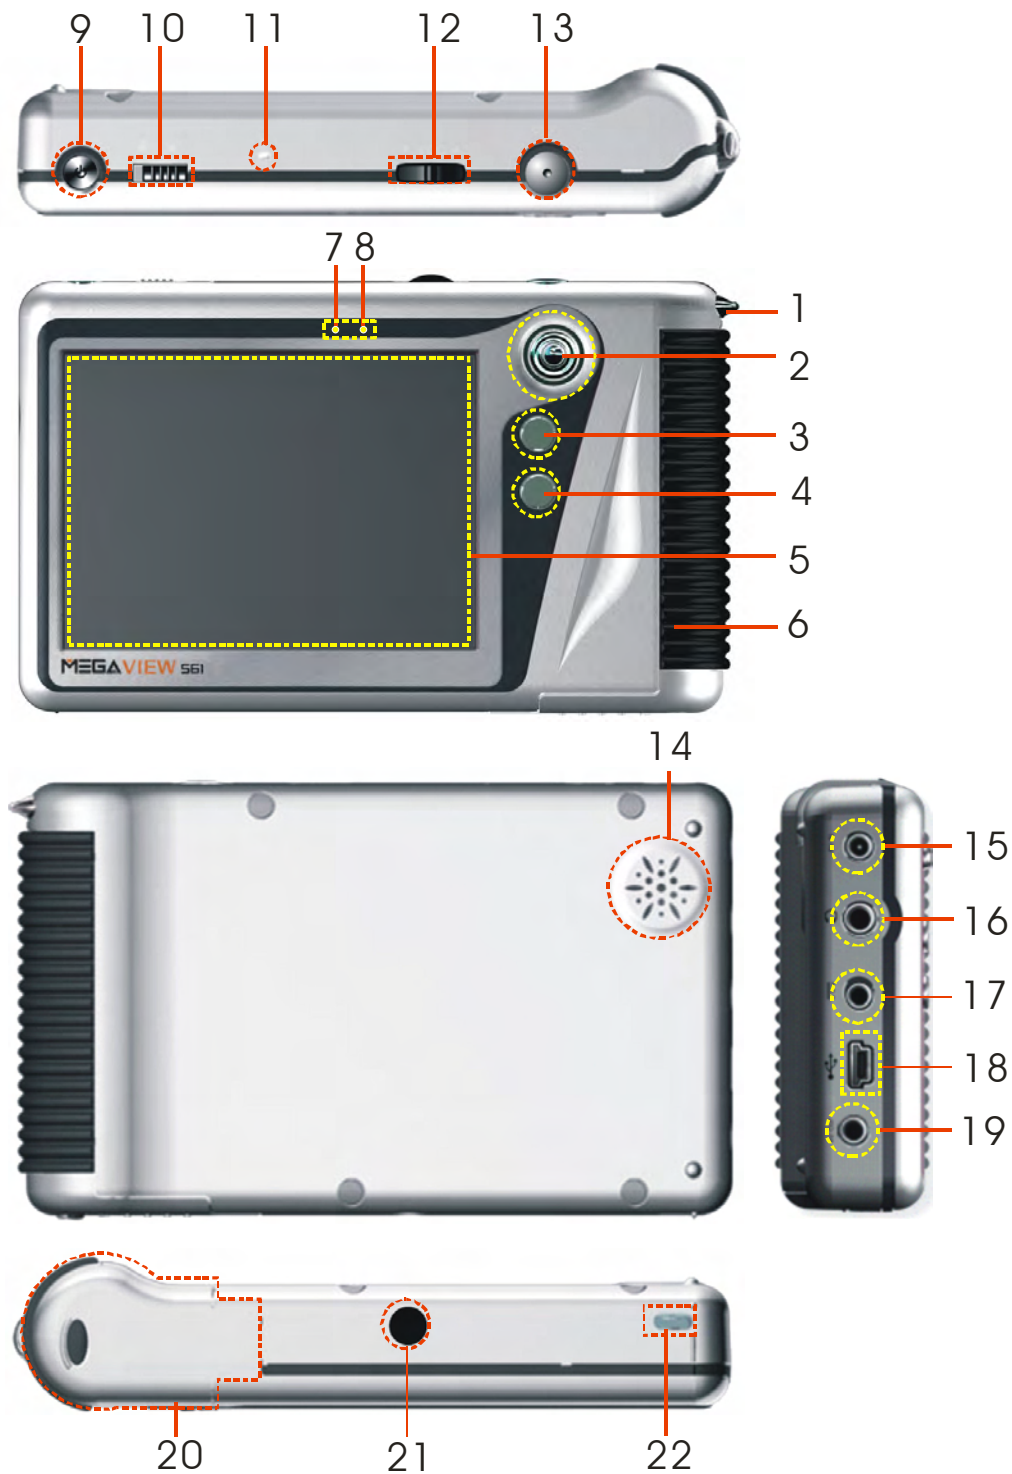


- | | |
|-----------------------|---|
| 1. Strap Hole | Tie the supplied Strap here. |
| 2. Navigation key | The 4-way Navigation key moves among selections. |
| 3. ► /Enter | Press to play/ pause or execute your desired action. |
| 4. ■ /Exit | Press to stop or go to the previous menu. |
| 5. LCD Display | Show menus and playing. |
| 6. Hold Handle | The hold handle of MEGA VIEW 561 . |
| 7. Power LED | This LED is on when MEGA VIEW 561 is power on, blinking when charging battery. |
| 8. Record LED | This LED is on when recording. |
| 9. Power On/ Off | Press to power on/ off MEGA VIEW 561 . |
| 10. Lock Switch | When this Switch is locked, all key press commands are disabled to prevent unwanted key pressing. |
| 11. MIC | Built-in Microphone for voice recording. |
| 12. Volume Control | Pull it to the right to increase volume, to the left to decrease volume. Press it down to mute. |
| 13. REC[●] | Press to start or stop the recording. |
| 14. Speaker | Built-in speaker. |
| 15. AV Line-in Jack | Plug AV cable here to enable AV Line-in recording. |
| 16. Earphone Jack | Plug the earphones here. |
| 17. AV Line-out Jack | Plug AV cable here to enable AV Line-out to external display (TV). |
| 18. USB Connector | Connect the mini USB connector of the supplied USB cable here, and the other end to PC host. |
| 19. DC-in Jack | Plug in the supplied AC Adapter here to recharge. |
| 20. Battery cap | Press the latch and push the cap forward to replace the rechargeable battery. |
| 21. Tripod Screw Hole | Secure the tripod here to hold MEGA VIEW 561 . |
| 22. CIR Receiver | Receive command signals from supplied remote control. |

Operating Menu Displays




Power on **MEGA VIEW 561**, you will see main menu on LCD display after MSI boot-up animation. Following are the instructions for each menu option.

Main Menu

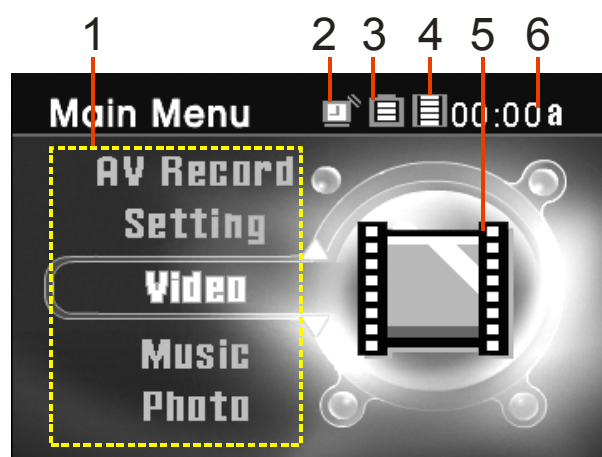


1. Menu List: List MEGA VIEW 561 function options, such as Video, Music, Photo, etc.
2. Alarm: Indicate alarm clock is set.
3. Battery: Show remaining battery level.
4. Hard Disk capacity: Indicate available hard disk space.
5. Function Icon: Indicate selected function.
6. Time: Show current time (tuning required).

Video/Photo/Music Menu

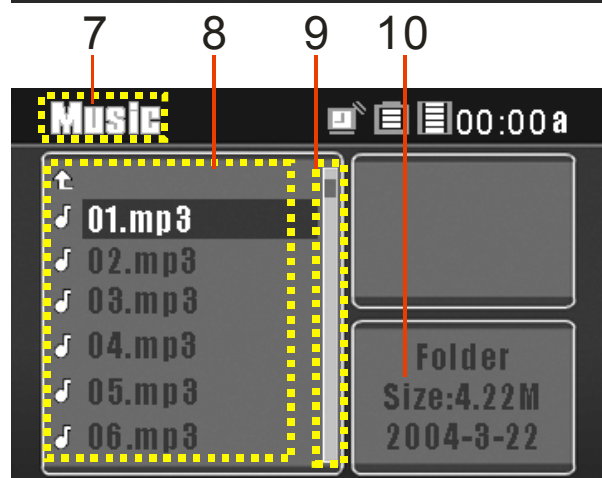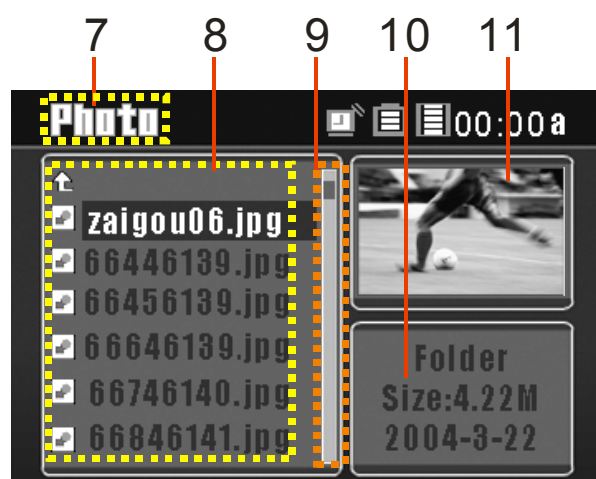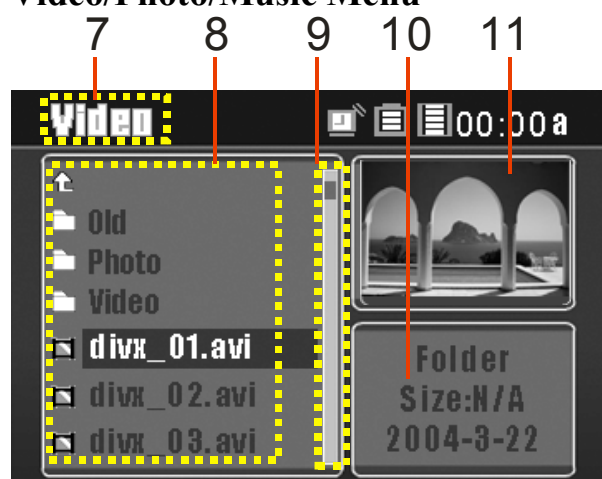

7. Menu Title: Show the selected menu title.
8. List: All files in a selected menu.
9. Scroll bar: Indicate more files available.
10. File Info.: Show the selected folder or file information. (File format, size, and saving date).
11. Preview: Show video/ photo preview when push the Navigation key to the right on a selected video/ photo.

FM Radio

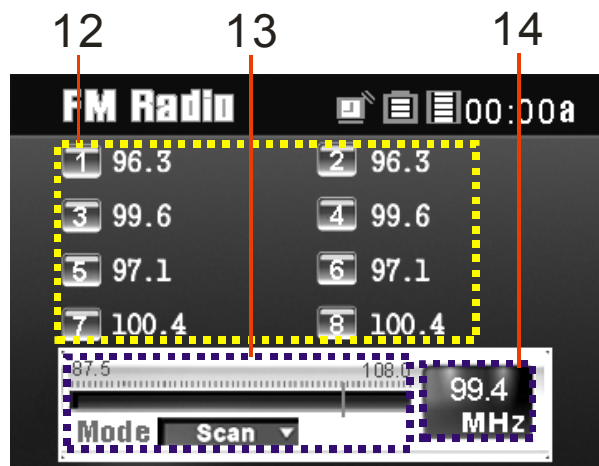


12. Memorized Stations: 8 FM stations can be set to memory.

13. Frequency Bar: Find a FM station from 87.5 to 108.0 with Navigation key.

14. Channel Frequency: Current FM tune-in frequency.


Voice Recording

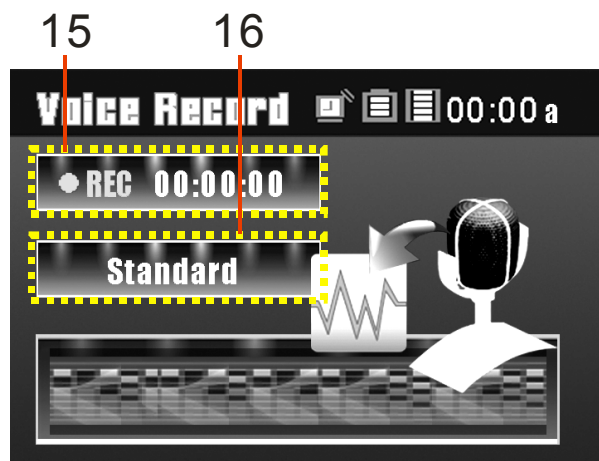

15. Recording Time: Voice recording elapse (hh: mm: ss).

16. Recording Quality: Indicate selected and operating voice recording quality.


AV Recording

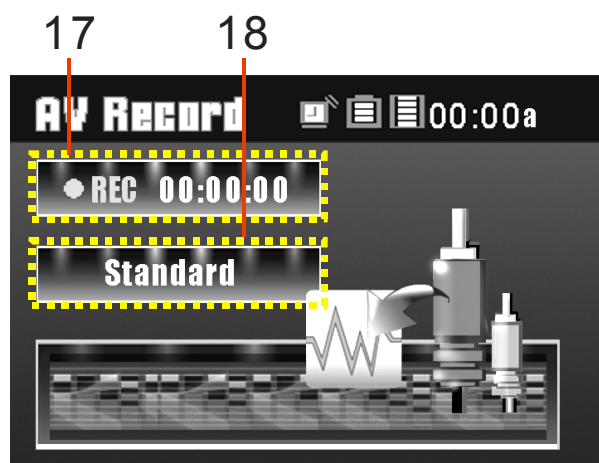

17. Recording Time: AV recording elapse (hh: mm: ss).

18. Recording Quality: Indicate selected and operating AV recording quality.

Setting Menu

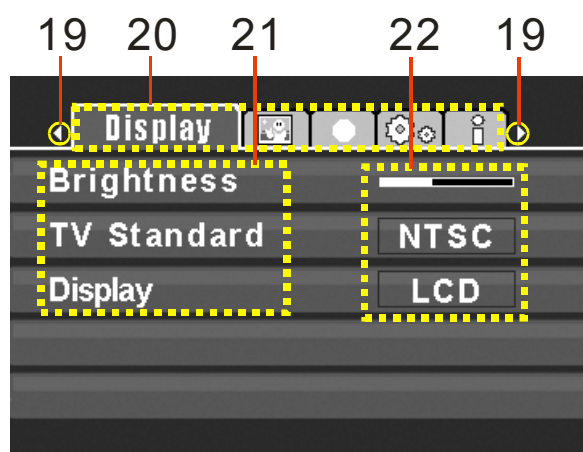

19.Scroll bar: Mean more tabs are available.

20.Tabs: Include Display, Music, Recording, System, and Info Tabs.

21.Setting Items: List tab item for adjusting.

22.Setting Options: Show setting options of each item.

Tripod

MEGA VIEW 561 has a tripod socket where you can secure the supplied Tripod. After **MEGA VIEW 561** is secured with the Tripod, it will stand on your table. You can then watch Video file without holding it.



Note: you can also purchase other secure tripod for MEGA VIEW 561. But screw length can not be longer than 6 mm.


USB Hard Disk

MEGA VIEW 561 has a mini hard disk inside. You can operate **MEGA VIEW 561** as an USB hard disk and save personal data to it. Simply connect **MEGA VIEW 561** to computer, and use **Windows Explorer** to manage your data.

Hard Disk Capacity

The mini hard disk of **MEGA VIEW 561** has 20GB capacity. You can check Hard Disk Capacity icon on LCD display for the capacity status.

Hard Disk Space Rest Reference

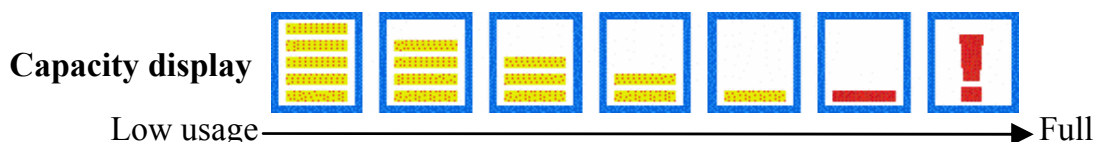

Lock Switch

MEGA VIEW 561 has a **Lock Switch** to avoid accidental operation. Slide the Lock Switch to lock position while power is on; you will see the following right figure to indicate all function keys are disabled.



Remote Control

MEGA VIEW 561 remote control is for you to operate **MEGA VIEW 561** in a longer distance. You can press Menu button to back to Main Menu. Press TV/LCD button to switch viewing device between TV and **MEGA VIEW 561**. Use the buttons as the buttons on **MEGA VIEW 561**.

Note: The Power button can only power off MEGA VIEW 561, not power it up.




Li-ion Battery Recharging

MEGA VIEW 561 comes with a Li-ion rechargeable and removable battery. Charge the battery until full when you use **MEGA VIEW 561** for the first time by following the steps below:

1. Connect the supplied AC Adapter to AC outlet, and plug in the other end of the AC Adapter to the DC-in jack of **MEGA VIEW 561**.
2. While recharging, Power LED will keep blinking. If you power on **MEGA VIEW 561** while recharging, you will see the following right power charging figure on LCD display.




3. When the battery is full, the Power LED will stop blinking. On main menu, you will see  icon at battery position. To stop recharging, disconnect the Adapter from **MEGA VIEW 561**.

Note 1: Charge **MEGA VIEW 561** only with the supplied AC Adaptor.

Note 2: Do NOT open the battery cap while the power is on!

Note 3: You can still operate **MEGA VIEW 561** while recharging; but the recharging time will be longer.

Battery Consuming Reference

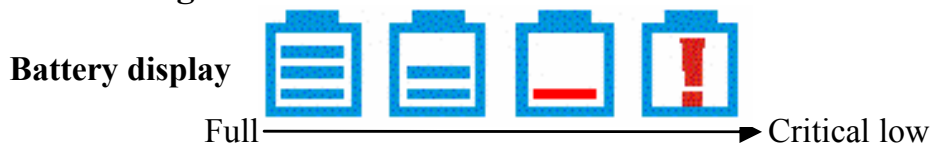

MEGA VIEW 561 uses a 2200mAh, 3.7V, 1 Cell rechargeable removable Li-ion battery. The battery consuming reference will vary in different operating modes. A fully recharged battery consumption reference is as following:

- Video Playback/ Video Record: can be used for about 3 hours.
- Music Playback/ Music Record: can be used for about 8 hours.
- FM Radio/ Photo Viewer: can be used for about 7 hours.

Chapter 3. Connect & Remove from PC

Connect MEGA VIEW 561 to Computer

1. Press  button to power on **MEGA VIEW 561**.



2. Plug the mini end of the supplied USB cable to **MEGA VIEW 561**, and the other end to your computer.




3. Once **MEGA VIEW 561** is connected to your computer, it should be detected by your computer operating system automatically. You will see the following message showing on **MEGA VIEW 561**.



Note: *If the operating system of your computer is Windows 98SE or ME, a new driver installation is required to activate MEGA VIEW 561 on your computer. Please refer to Appendix B. for driver installation.*

4. After connection is initialized, your computer operating system will recognize **MEGA VIEW 561** as a hard disk. Go to [Device Manager] by clicking “Start” → “Setting” → “Control Panel” → “System” → “Hardware”, and look for [HITACHI_DK14FA-20 USB Device] under [Disk Drive] to check connection status. If the connection is failed, you will not find [HITACHI_DK14FA-20 USB Device]. Repeat step 2 to reconnect **MEGA VIEW 561** to your computer.

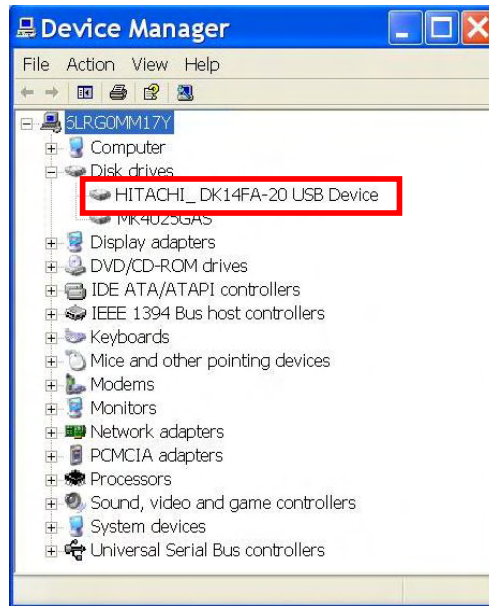

5. After your computer operating system recognizes **MEGA VIEW 561** as a hard disk, you can move, copy, or delete files with Windows Explorer.

For systems with Windows 98SE

After connecting **MEGA VIEW 561** to a Windows 98SE operating system computer, the Windows system will detect **MEGA VIEW 561** and ask to install driver. Place the supplied driver CD in the CD-ROM drive, and refer to Appendix B. to complete the driver installation.

***Format MEGA VIEW 561**


We strongly suggest not to format **MEGA VIEW 561** hard disk! **MEGA VIEW 561** display interfaces will not function correctly if the hard disk is formatted. If you do need to format **MEGA VIEW 561** hard disk, connect **MEGA VIEW 561** to your computer first and format it with Windows formatting tool. When formation is completed, please refer to **Appendix B** for how to recover the system files, software, and firmware.


Note: If you format MEGA VIEW 561 hard disk, all data and files stored in will all be erased!

Note: Use Windows Disk Defragmenter or other defragmenter tool to reduce MEGA VIEW 561 hard disk fragment to improve hard disk access speed and for longer battery life.

Safely Remove MEGA VIEW 561 from Computer

After managing files or update firmware, please follow the steps below to safely remove **MEGA VIEW 561** from computer:

1. When **MEGA VIEW 561** is connected to computer,  icon will be shown on computer system tray. To remove **MEGA VIEW 561**, close all the related programs first. Double click the icon to bring up Safely Remove Hardware dialog box. Click on **USB Mass Storage Device** and **Stop** button.

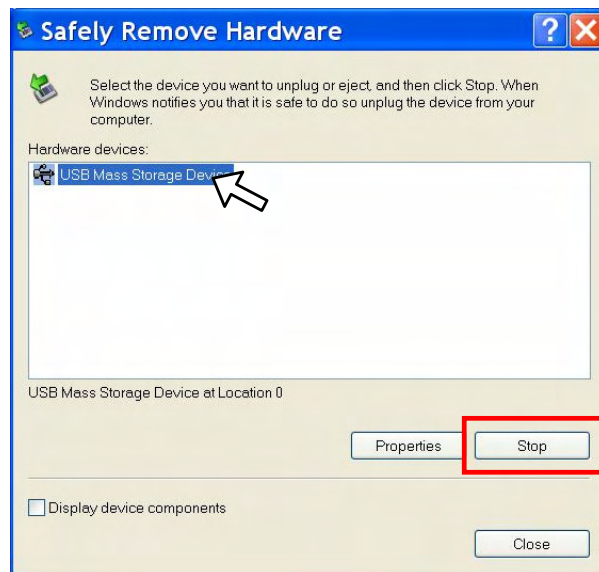

2. You will see following window, click on **USB Mass Storage Device** and **OK**.




3. When you see following message **MEGA VIEW 561** can now be safely removed from computer.




Chapter 4. Basic Usage

Power On and Off



1. Press  button once to power on **MEGA VIEW 561**. After startup animation, you will see the main menu and can use **MEGA VIEW 561**.

Note: If you locked Lock Switch before powering on, power would not be turned on. Unlock the Lock Switch and go on.

2. To power off **MEGA VIEW 561**, press  button again. You will see following message on display, and **MEGA VIEW 561** will be shut down.



Note: If MEGA VIEW 561 can not be shut down by one short press, press and hold the power button for 4 seconds to force power off.

Volume Adjustment



1. To change volume level, push **Volume Control** to left/right. The following volume status bar will appear while adjusting volume.



2. To mute the volume, press **Volume Control** button down. Volume status bar will be seen as following.



Video

MEGA VIEW 561 supports playback of following video files: MPEG-4, DivX 3.11/4/5, Motion JPEG, and WMV-9 SP@ML. Video can be playback at up to 30fps. *Only supported file format will be playback on **MEGA VIEW 561**.*



Figure 1



Figure 2

Play Video on MEGA VIEW 561

1. Connect **MEGA VIEW 561** to computer by referring to Chapter 3. Move or copy supported video files from computer to **MEGA VIEW 561**, and manage files with Windows Explorer.
2. Disconnect **MEGA VIEW 561** from computer after files are transferred.
3. On **MEGA VIEW 561** main menu, push **Navigation** key up or down to **Video** as Figure 1. On **Video** option, press **▶/Enter** button to enter Video menu as showing in Figure 2.
4. Push **Navigation** key up or down to select one file from the list. You can preview the selected video by pushing **Navigation** key to the right. Press down **▶/Enter** button, you can watch the selected video in full screen.
5. If selected file is not supported by **MEGA VIEW 561**, you will see a message as below.




6. Push **Navigation key** right to fast-forward video playback, push to switch among FFx2, x4, x8, x16, and x1. (Push once to fast-forward by 2x, twice to fast-forward 4x, etc.) Press **▶/Enter** to make video playback normally.
7. Push **Navigation key** left to rewind the playback, push to switch among RWx2, x4, x8, x16, and x1. (Push once to rewind by 2x, push twice to rewind 4x, etc.) Press **▶/Enter** button to make video playback normally.
8. Push **Navigation key** up or down to adjust the brightness of the display. There are 16 levels to adjust, please find the level that meets your need.



9. Press **■/Exit** button to stop video playing, and go back to Video Menu.

Delete a Video File on MEGA VIEW 561

To delete a video, on video list, push **Navigation key** to the left. You will see a dialog box as following to confirm the deletion. Push **Navigation key** left/right to select Yes/No, and press **▶/Enter** button to delete the selected video.

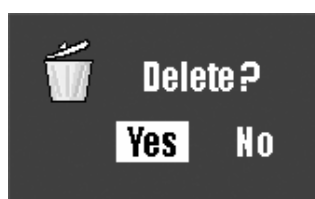

Watch a Playing Video File on TV:

1. Connect **MEGA VIEW 561** AV-out Jack to a TV with an AV cable. Note the AV cable should be connected correspondingly in color or text to TV AV-in Jack.
2. Turn on your TV and switch it to **Video** mode.
3. On **MEGA VIEW 561**, adjust Setting Menu\ Display\ Display option to **TV**. Then you will see the display switch to TV.
4. Play a video file on **MEGA VIEW 561**. Now you can watch the video file on TV and adjust settings on **MEGA VIEW 561**.
5. You will find the **MEGA VIEW 561** Remote Control a very handy way to control **MEGA VIEW 561** from distance.

Music

MEGA VIEW 561 supports MP3, MPEG1 Layer2, LPCM, ADPCM, and WMA-9 Layer 2a files playback. MP3 and WMA can be playback at up to 320 Kbps. *Only supported format will be playback on MEGA VIEW 561.*




Figure 3



Figure 4

Play Music on MEGA VIEW 561

1. Connect **MEGA VIEW 561** to computer, and then move or copy music file from computer to **MEGA VIEW 561** with Windows Explorer.
2. After files are transferred to **MEGA VIEW 561**, disconnect **MEGA VIEW 561** from computer.
3. On **MEGA VIEW 561** main menu, push **Navigation** key up or down to **Music** as Figure 3. On **Music** option, press **►/Enter** button to Music menu as Figure 4.
4. Push **Navigation** key up or down to select one file from the list. You can pre-hear the selected song by pushing **Navigation** key to the right.
5. Press down **►/Enter** button to play the song with Virtual Music Player.

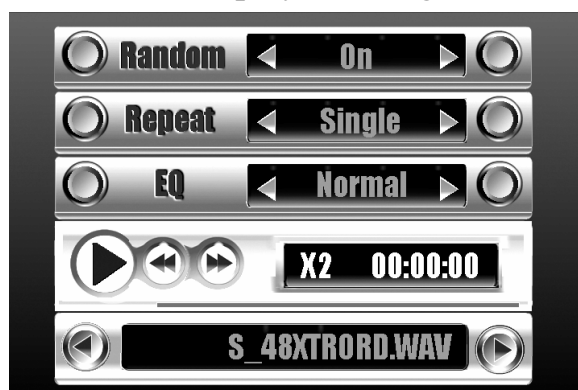

6. If the selected file is not supported by **MEGA VIEW 561**, you will see a message as below.




7. Push **Navigation key** up or down to choose from **Random/ Repeat/ EQ/ Playback Status/ Song**. You can adjust any of the following modes according to your preference.

| | |
|-----------------|---|
| Random | Push Navigation key right or left: On/Off |
| Repeat | Push Navigation key right or left: Single/All/Off |
| EQ | Push right or left: Normal, Rock, Dance, Jazz, Classic |
| Playback Status | Press ▶ /Enter key: to play/ pause playback Push right: 2X/ 4X fast-forward/ Play Push left: 2X/ 4X rewind/ Play |
| Song | Push left: go to previous song Push right: go to next song |

8. Press **■** / **Exit** button once to stop music playing.

Delete a Music file on MEGA VIEW 561

To delete a music file, select it from the list. Push **Navigation key** to the left; you will see a Dialog Box to confirm the deletion. Push **Navigation key** left or right to select **Yes/ No**, and press **▶** /**Enter** button to delete the file.

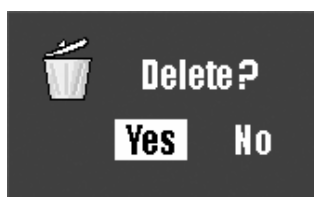

Photo

MEGA VIEW 561 supports viewing JPEG, GIF, BMP, and TIFF file format.

*Only supported file format will be viewed on **MEGA VIEW 561**.*



Figure 5



Figure 6

View Photo or Picture

1. Connect **MEGA VIEW 561** to computer first, and move or copy supported pictures from computer to **MEGA VIEW 561** with Windows Explorer.
2. Disconnect **MEGA VIEW 561** from computer after files are transferred.
3. On **MEGA VIEW 561** main menu, push **Navigation key** up or down to **Photo** as Figure 5. On **Photo** option, press **►/Enter** button to Photo menu as Figure 6.
4. Push **Navigation key** up or down to select one photo/picture file from the list. You can preview the selected file by pushing **Navigation key** to the right. Press **►/Enter** button, you can see the file in full screen.
5. While viewing the photo in full screen, you can push **Navigation key** up or down to view previous or next photo.
6. If you want to rotate the photo, push **Navigation key** to the right. One press will make the photo rotates 90 degrees.
7. Otherwise, press **►/Enter** button to start Slide Show. Files slide in certain seconds adjusted in Setting Menu→ Photo→ Slide Interval. Press **►/Enter** button again to stop slide show.

8. If you adjusted Setting Menu→ Photo→ Slide Music option to **On**, you can hear all music files in Music folder playing while the photos sliding.
9. You can also browse the photo by 3X3 format. Push **Navigation key** left and you will see 9 frames on the display.



Note: *The icon in the middle of bottom line means the file format can not be supported by MEGA VIEW 561.*

10. Push **Navigation key** to the right or left to select previous or next photo. Push **Navigation key** up or down to select last 9 or next 9 photos. Press **▶/Enter** button to view the selected photo in full screen.
11. Press **■/Exit** button to stop photo viewing.

Note: *Photos/pictures are best viewed at resolution of 1600x1200 for JPEG, TIFF, and BMP format and 800x600 for GIF.*

Delete a Photo file on MEGA VIEW 561

To delete a photo/picture, push **Navigation key** up or down to select the unwanted file. Push **Navigation key** to the left, you will see a Dialog Box to confirm the deletion. Push **Navigation key** left or right to select **Yes/ No**, and press **▶/Enter** button to delete the file.



FM Radio

The **MEGA VIEW 561** has a built-in FM Radio function.



Figure 7


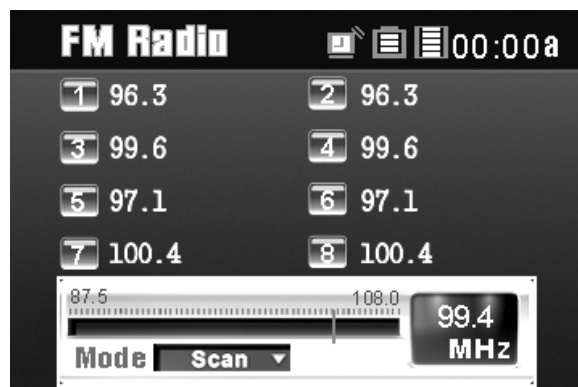


Figure 8

Search a FM Station

1. First of all, plug earphones to earphone jack. The earphones are also used as antenna for **MEGA VIEW 561**. “**Plug in Earphone!**” message will appear on LCD display if you do not plug it in. Radio quality might vary from regions and angles. Disconnecting earphones might cause radio noise.

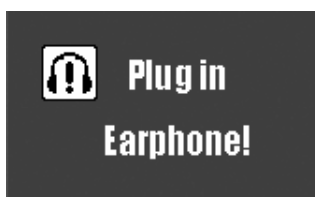

2. Push **Navigation key** up or down to select **FM Radio** as Figure 7, and then press **►/Enter** button. The display will show as Figure 8.
3. You can see 8 default stations showing on display. Press **►/Enter** button to select Frequency Bar to search a different radio station.



4. Press **►/Enter** button to select **Scan** or **Fine Tune**. When **Scan** is selected, by pushing **Navigation key** to the right or left, an available station will be found. If **Fine Tune** is selected, frequency bar will be adjusted by 0.1 MHz on each **Navigation key** move.
5. On searching, you can see frequency showing on display.

Store a FM station


1. To store a FM station, press **▶/Enter** button on your current radio station. Station number 1 will be flashing.
2. Select station number from 1 to 8 by pushing **Navigation key** to left or right, and press **▶/Enter** button to save frequency to the assigned station number.
3. Repeat steps 1-2 to store other stations.

Select a stored FM station


1. To select a stored station, push **Navigation key** up to Station List.
2. Push **Navigation key** to the left or right to select a number and press **▶/Enter** button to listen to the selected station.

Record voice from a FM station

1. You can also record radio broadcast into .mp3 format with **MEGA VIEW 561**. Select a station and press **REC[•]** button to record.
2. You will see Record Quality, Record Time, and Frequency information and Record LED will be on.

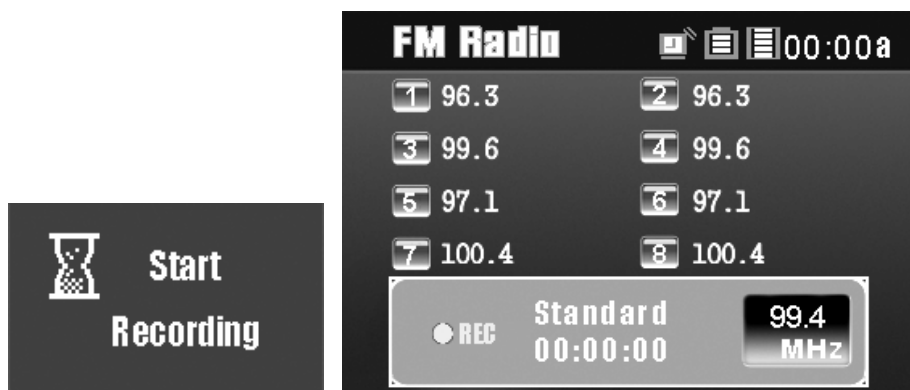

3. To stop recording, press **REC[•]** button again. Upon recording stopped, saving information will be shown as following figure. You will see a recorded file under **Music\record** folder and file name starts with **[FM000000.mp3]**, **[FM000001.mp3]**, and so forth. Go to **Music** mode to select and listen to it.

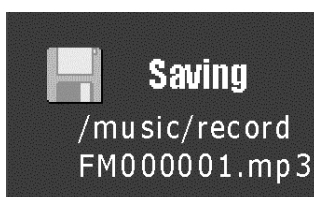

Voice Recording

MEGA VIEW 561 also works as a voice recorder.



Figure 9

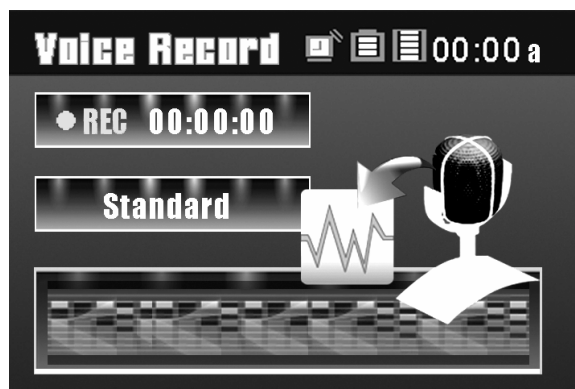


Figure 10

Record Voice

1. Push **Navigation** key up or down to select **Voice Record** as figure 9. On Voice Record, press **►/Enter** button to voice recording, as figure 10.

Note: To prevent battery runs out while recording resulting system failure, we suggest to plug in AC Adaptor on recording.

2. Press **REC[•]** button to start to record, and the Record LED will flash.



3. To stop recording, press **REC[•]** button. You will see a recorded file under **Music\record** folder and file name starts with **[VO000000.mp3]**, **[VO000001.mp3]**, and so forth.

Note: The maximum length of Voice Recording depends on hard disk free space. Voice Recording can not exceed 24hrs or 2GB.

Play a Recorded Voice File

1. To play a recorded voice file, exit **Record** mode and go to **Music** mode.
2. Find recorded file name on the file list of **Music** mode.
3. Select a file and press **►/Enter** button to play.

Delete a Recorded Voice File

Steps to delete a recorded voice file are the same as deleting a music file. Please refer to **Music** section.

Note: You can easily use Windows Explorer to manage/ delete recorded files.

AV Recording

MEGA VIEW 561 can also record AV signal from other devices.



Figure 11



Figure 12


Record AV

1. Connect **MEGA VIEW 561** AV-in Jack to an AV output device, such as TV or DVD player with an AV cable in package. Match video line-in component cable to AV signal connectors on the same row by color or text.

Note: To prevent battery runs out while recording resulting system failure, we suggest to plug in the AC Adaptor to supply electricity.

Note: We recommend to set resolution and AV quality in the setting menu to Best before recording from TV.

2. On main menu, push **Navigation** key up or down to select **AV Record** as Figure 11. On **AV Record**, press **►/Enter** button, as Figure 12.
3. You will first read a prompt for **Audio/ Video** or **Audio** options. Select your preference with **Navigation** key, and press **►/Enter** button to confirm.

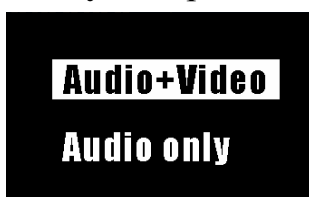


4. If **Audio/ Video** option is selected without AV cable connected, you will see the following message on the display.



5. Press **REC[•]** button to start to record, and Record LED will turn on.



6. To stop recording, press **REC[•]** button. If the recording option is set to **Audio/Video**, a recorded file will be generated in Video\Record folder. File name starts with [AV000000], [AV000001], and so forth. If the recording option is set to **Audio**, recorded files will be created in Music\Record folder with file name starting as [AU000000.mp3], [AU000001.mp3].

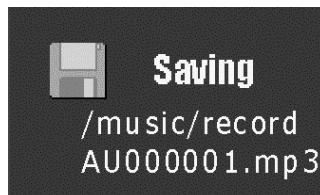

Note: The maximum length of AV Recording depends on hard disk free space and can not be exceeded 3hrs or 2GB.

Play a Recorded AV File

1. To play a recorded AV or audio file, go back to main menu and select **Video** or **Music** mode by referring to the **Video** or **Music** section.
2. Find the recorded file name in the Video\Record folder, or Music\Record folder.
3. Select the record file and press **►/Enter** button to play the file.

Delete a Recorded AV File

Delete a recorded voice file as deleting a music file.

Note: You can easily use Windows Explorer to manage/ delete recorded files.

Setting

MEGA VIEW 561 **Setting** menu includes **Display**, **Photo**, **Record**, **System**, and **Info** Tab.



Figure 13

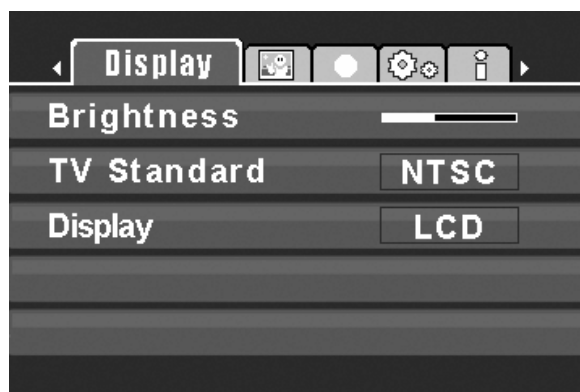


Figure 14

1. Select **Setting** by pushing **Navigation** key up or down as Figure 13. Press **►/Enter** button, the screen will show as Figure 14.
2. Push **Navigation** key right or left to select **Display**, **Photo**, **Record**, **System**, and **Info** Tab with various setting options in each tab.

Display Tab

Display Tab includes **Brightness**, **TV Standard**, and **Display** items.

Change Display Setting

1. Enter **Setting** menu, and you are default starting from **Display** tab, show as Figure 14.
2. Push **Navigation** key down to select among **Brightness**, **TV Standard**, and **Display**. You can change settings by referring to the table below.

| Setting Item | Method and Purpose | Options |
|--------------|---|---------------------------|
| Brightness | Push Navigation key to right or left to adjust display brightness | Adjust brightness by need |
| TV Standard | Push Navigation key to right or left to select video standard | NTSC/ PAL |
| Display | Push Navigation key to right or left to select output device | LCD/TV |

Photo Tab

You can adjust photo settings, such as **Slide Music**, **Slide Repeat**, and **Slide Interval** in **Photo** tab to meet your demand.



Change Photo Setting

1. In **Setting Menu**, push **Navigation key** right or left to go to **Photo** as figure above.
2. Push **Navigation key** up or down to select among **Slide Music**, **Slide Repeat**, and **Slide Interval**. You can change setting by referring to the following table.

| Setting Item | Adjust way and purpose | Options |
|----------------|---|-------------------------|
| Slide Music | Push Navigation key right or left to enable or disable the background music | On, Off |
| Slide Repeat | Push Navigation key right or left to enable or disable the repetition | On, Off |
| Slide Interval | Push Navigation key right or left to adjust the interval between each photo | 1/ 3/ 5/ 10/ 20/ 30 sec |

Record Tab

You can adjust **Resolution**, **AV Quality**, and **Voice Quality** in **Record** tab.



1. In **Setting Menu**, push **Navigation key** right or left to **Record** tab. Display will show as above.
2. Push **Navigation key** up or down to select a setting item. You can change the setting by referring to the table below.

Note: *The better resolution and quality you choose, the bigger file size it will be.*

| Setting Item | Method and purpose | Options |
|---------------|---|------------------------------|
| Resolution | Push Navigation key right or left to adjust record resolution | Standard, Fine, Better, Best |
| AV Quality | Push Navigation key right or left to adjust AV quality | Standard, Fine, Better, Best |
| Voice Quality | Push Navigation key right or left to adjust voice quality | Standard, Fine, Better, Best |


MEGA VIEW 561 can record video at up to 30fps. You can choose options among **Best**, **Better**, **Fine**, or **Standard** quality to meet your demand.

Performance for each setting item is as following table:

| Setting Item \ Quality | Quality | | | |
|--------------------------|---------|---------|---------|----------|
| | Best | Better | Fine | Standard |
| AV Resolution | 320x240 | 288x216 | 272x204 | 240x180 |
| AV Quality: Video (kbps) | 2000 | 1600 | 1200 | 800 |
| AV Quality: Audio (kbps) | 128 | 112 | 96 | 64 |
| Voice Quality (kbps) | 192 | 128 | 96 | 64 |

System Tab

You can adjust various system options in **System** tab.

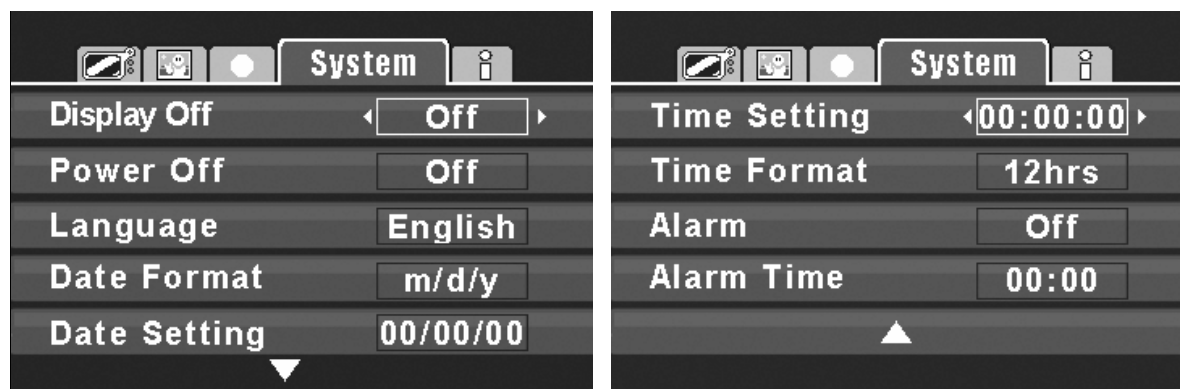


Change System Setting

1. In **Setting Menu**, push **Navigation** key right or left to **System** tab. The display will show as above.
2. Push **Navigation** key up or down to select among **Display Off**, **Power Off**, **Language**, **Date Format**, **Date Setting**, **Time Setting**, **Time Format**, **Alarm**, and **Alarm Time**. Change setting according to the table below.

| Setting Item | Method and Purpose | Options |
|--------------|---|--|
| Display Off | Push Navigation right or left to set Display shut down on idling to protect LCD panel | Off /3 sec/5 sec/10 sec /15 sec/30 sec/1 min |
| Power Off | Push Navigation right or left to set power off automatically | Off /1 min/2 mins/ 3 mins/5 mins/10 mins |
| Language | Push Navigation right or left to select language | Vary from versions |
| Date Format | Push Navigation right or left to select date format on display | y/m/d, m/d/y, d/m/y |
| Date Setting | Push Navigation right or left to select year/ month/day Push Navigation up or down to change property | Set the exact date |
| Time Setting | Push Navigation right or left to select hour/ minute/sec Push Navigation up or down to change property | Set the exact time |
| Time Format | Push Navigation right or left to select time format on display | 12hrs/ 24 hrs |
| Alarm | Push Navigation right or left to enable or disable the alarm function | Off/ On |
| Alarm Time | Push Navigation right or left to select hour/ minute/sec Push Navigation up or down to change property | Set the alarm time |

Info Tab

You can find out **HDD Free Space** and **Version**, and **Update Software**, **Update Firmware**, and **Load Defaults** in **Info** tab.

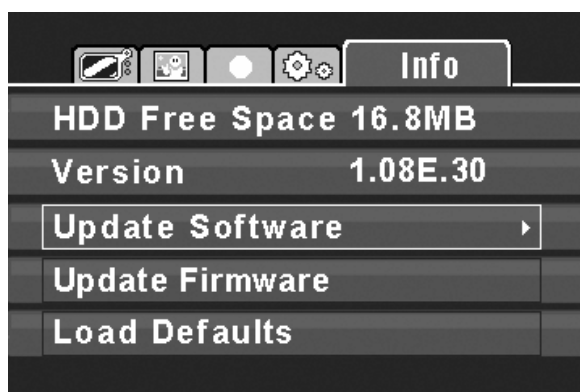

Change Info Setting

1. In **Setting Menu**, push **Navigation** key right or left to select **Info** tab. The display will show as above.
2. Push **Navigation** key up or down to select among **HDD Free Space**, **Version**, **Update Software**, **Update Firmware**, and **Load Defaults**. You can find the information or change setting according to the table below.

| Setting Item | Method and Purpose | Options |
|-----------------|---|---------|
| HDD Free Space | Press ► /Enter button to show free space in HDD. | NA |
| Version | Press ► /Enter button to show software and firmware versions. | NA |
| Update Software | Please refer to Appendix B for how to upgrade the software. | Yes/ No |
| Update Firmware | Please refer to the Appendix B for how to upgrade the firmware. | Yes/ No |
| Load Defaults | Push Navigation key right and select YES to load default setting when needed. | Yes/ No |

Appendix A. Specifications

| MEGA VIEW 561 | |
|-----------------------|--|
| Dimension | 119 x 76 x 21/24.5 mm |
| Weight | About 240 g |
| Operating Temperature | 5 °C ~ 35°C |
| Storage Temperature | -20°C ~ +70 °C |
| Operating Humidity | 5% ~ 90% |
| Audio Spec | Earphone Output: 30mW rms (15mW / channel) Frequency: 20 to 20K Hz SNR: ~85dB |
| Supports OS | Windows 98SE, Windows ME, Windows 2000, Windows XP Home/ Pro, MAC OS 9.1/9.22/10.2 (Windows 98SE system requires driver installation.) |
| USB Profile | Meet USB 2.0 Profile |
| LCD Display | 3.5" |
| Hard Disk | 20 GB |
| I/O Input | Output: mini-USB connector, Earphone Jack, AV-in Jack, AV-out Jack, AC Adaptor connector, CIR, Speaker, and Microphone |
| EMI and Safety | BSMI, FCC, CB, CE, VCCI, CCC |
| Battery | Li-ion rechargeable battery (Built-in), 2200 mAh / 3.7V Video Playback: 3 hours Audio Playback: 8 hours |
| Power Adapter | 100 ~240 V (vary from country to country) |

* Battery life test is under the condition of Temperature/Humidity 25°C, 50%RH, System Setting: Brightness: 10 /16 Level, Volume: 50%, Audio Output: Headphone, Test File: Resolution: 240x180, Video bitrate: 800Kbps, Audio bitrate: 64Kbps, File size: 1.1GB, MP4+MP3, Power Sources: Battery, Test Duration: 4 hours.

Appendix B. Drivers and Recovery CD

MSI MEGA VIEW 561 package includes a Driver and Recovery CD. Insert the supplied CD into your CD-ROM, and the CD will auto run Setup program. On computer screen, you will see the display shown as below.



- **Install Windows98 USB Driver:**

For Windows 98 system computer users, click this option to install the USB Driver. Once the installation completed, Windows 98 system will be able to recognize **MEGA VIEW 561**.

- **Restore Preload Image:**

Restore **MEGA VIEW 561** firmware, software, Video clips, Music files, and pictures to manufacture default as you first day purchase it.

- **Exit:**

Exit and close the setup program.

Upgrade Software

MEGA VIEW 561 software can be upgraded. You need a computer with CD-ROM, the Driver and Recovery CD (or download upgrade file from MSI website), and the supplied USB cable ready for the following procedures:



Note: To prevent battery runs out while upgrading resulting system failure, we recommend to plug the AC Adaptor to provide electricity.

Note: If you need to update both firmware and software, update firmware first.

1. Connect **MEGA VIEW 561** to your computer with the USB cable.
2. Power on **MEGA VIEW 561** to let your computer to initialize it.
3. Copy "**system**" folder from the Driver CD, or download it from MSI website, to the root directory of your **MEGA VIEW 561**.
4. Disconnect the USB cable from your computer.
5. Select **Setting** from main menu and press **▶/Enter** button to enter.
6. Push **Navigation** key right or left to select **Info** tab.
7. Push **Navigation** key up or down to select **Update software**.
8. Push **Navigation** key right. Message "**Confirm? Yes No**" will show on the display.
9. Push **Navigation** key right or left to select **Yes** and press **▶/Enter** to start to upgrade software. Or select **No** and enter to cancel upgrade.



10. When software upgrade completes, system will restart.

Upgrade Firmware

MEGA VIEW 561 firmware can be upgraded. You need a computer with CD-ROM, the Driver and Recovery CD (or download upgrade file from MSI website), and the supplied USB cable ready for the following procedures:



Note: To prevent battery runs out while upgrading and causes system failure, it is recommended to plug the AC Adaptor to provide electricity.

Note: If you need to update both firmware and software, update firmware first.

1. Connect **MEGA VIEW 561** to your computer with the USB cable.
2. Power on **MEGA VIEW 561** to let your computer to initialize it.
3. Copy "**system**" folder from the Driver CD, or download it from MSI website, to the root directory of your **MEGA VIEW 561**.
4. Disconnect the USB cable from your computer.
5. Select **Setting** from main menu and press **▶/Enter** button to enter.
6. Push **Navigation** key right or left to select **Info** tab.
7. Push **Navigation** key up or down to select **Update software**.
8. Push **Navigation** key right. Message "**Confirm? Yes No**" will appear on the display.
9. Push **Navigation** key right or left to select **Yes** and press **▶/Enter** to start to upgrade firmware. Or select **No** and enter to cancel upgrade.



10. When firmware upgrade completes, system will restart.